

# Updating Firmware for Biogenik Wired Control Pad (BGK163)



STEP #1: Go to [www.biogenikdesigns.com](http://www.biogenikdesigns.com) and go the 'Support' page.

STEP #2: Click the 'Firmware Update' button to download the Firmware Update Tool ZIP file.


STEP #3: Use a file extracting program, like WinZIP or WinRAR, to unzip the downloaded file.

STEP #4: Open the Firmware Update Tool file.

STEP #5: Press and hold the 'PS' button on the controller while connecting the USB cable to your Windows PC.

STEP #6: Select 'Wire' and then press the 'Update' button.

STEP #7: Wait until update is finished and do not unplug the controller during the update process. If you see a 'PASS' message, the update was successful. If the update fails, please repeat the steps again.

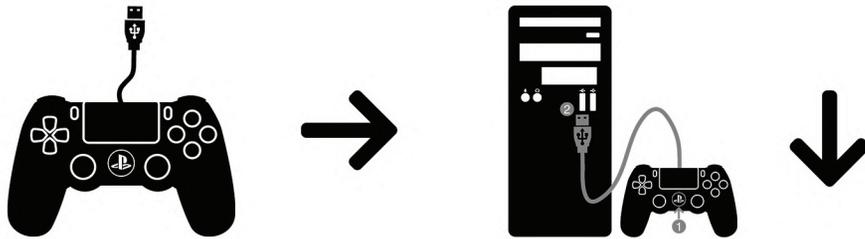

## WARNING:

Do not unplug the micro-USB cable any time before the firmware update to complete. Doing so could result in a firmware error and permanently damage the controller.

